

ABOUT NEXTGEN

NEXTGEN manufacturer of professional Pest Control products for use in Australia and New Zealand. NEXTGEN is wholly Australian owned and operated. The NEXTGEN range also includes:

- Fly Bait Stations
- Vinegar Fly Attractants
- Electric Mosquito Traps
- Termite Inspection Tools
- and more...



CONTACT US

Distributor:
Garrards Pty Ltd
Ph: 07 3881 1693
Em: info@garrards.com.au
Web: www.garrards.com.au

NG
NEXTGEN
PEST SCOPE

6mm Dual Lens Pest Borescope



Product Details

- A - Power Button
- B - Down (used in menu)
- C - Up (used in menu)
- D - Settings / Config
- E - OK / Confirm
- F - Preview / Playback
- G - LED Light
- H - Charging Indicator
- I - Status Light
- J - Probe attachment
- K - Record Video
- L - Take Photo
- M - LED ON/OFF (scope)
- N - Zoom
- O - Image freeze on screen
- P - LED ON/OFF (on unit)

Key Features

1m soft tube, 6mm diameter dual lens scope.

Scope is IP67 rated.

4 LED (front), 2 LED (side) - all with 3 settings (High, Medium, Low).

640 x 480 pixel camera probe.

3.5" TFT colour screen.

Rechargeable 3.7v battery included.

Soft carry case included.

USB charging cable included.

1600 x 1200 photos

640 x 480 videos



Safety Considerations

Important:

This product is made for inspections in wall cavities. Please keep unit clean and dry and avoid corrosive materials. Do not over-bend probe. Charge with 5v 1A power adapter.

Battery:

Do not over charge battery to retain longevity of battery life. Please remove battery if device will not be used for long periods of time. Battery is 3.7v lithium ion.



Troubleshooting

Q1 - No image on LCD Screen after turning on.

A1 - Please connect power adapter with device to re-activate battery.

Q2 - No video input from Probe.

A2 - Please remove and reconnect the Probe.

Q3 - Unable to store video or photos.

A3 - Please remove and re-insert micro SD. Please check micro SD is not faulty.

Q4 - Please format SD Card is displayed on screen.

A4 - The current Micro SD Card is not supported.

It is recommended to press the 'RESET' button to factory reset the device first if you experience any issues. The button is found next to the SD Card slot to the right side of the device.